

## MINI MOTORCYCLE OWNER'S MANUAL

### INTRODUCTION

Thank you for purchasing this product. The proper care and maintenance that your vehicle requires is outlined in this manual. Following these instruction will ensure a long trouble-free operating life of this vehicle and your satisfaction with it.

### SAFETY WARNINGS

This vehicle is NOT A TOY and ONLY used in closed off areas remote from public road traffic. Never permit children under age 14 to operate this vehicle. Adult's supervision is required if children under age 16.

#### WARNING:

Riding this vehicle can be a hazardous activity. Certain conditions may cause the equipment to fail without fault of the manufacturer. Like other vehicles, the Mini Dirt Bike can and is intended to move, and it is therefore possible to lose control, fall off and/or get into dangerous situations that no amount of care, instruction or expertise can eliminate. If such things occur you can be seriously injured or die, even when using safety equipment and other precautions. RIDE AT YOUR OWN RISK AND USE COMMON SENSE.

This manual contains many warnings and cautions concerning the consequences of failing to maintain, inspect or properly use your mini dirt bike. Because any incident can result in serious injury or even death, we do not repeat the warning of possible serious injury or death each time such a possibility is mentioned.

#### APPROPRIATE RIDER USE AND PARENTAL SUPERVISION

This manual contains important safety information and use tips to help you and your child operate and handle the mini dirt bike. Carefully read the manual in its entirety together with your child before letting your child ride it for first time. The manual also contains important information on servicing the vehicle.

It is your responsibility to review the manual and make sure that all riders understand all warnings, cautions, instructions and safety topics and assure that the riders are able to safely and responsibly use this product and protect your child from injury. We recommend that you periodically review and reinforce the information in this manual with your child, and that you inspect and maintain your children's vehicle to insure their safety. **The recommended rider age of 14 years** is only an estimate, and can be affected by the rider's size, weight or skills. Any rider unable to fit comfortably on the mini dirt bike should not attempt to ride it.

**It is important and necessary to conduct the technical training for your child before first use. To get the training information, please contact the dealer who you purchase the vehicle from. Before your child complete the training, do not let your child use this vehicle.**

Children often underestimate or fail to recognize the dangerous situation, you should make it clear to your child that should not, under any circumstances, operate the vehicle without supervision and that your child may only drive at speed that are commensurate with the child's riding ability and other road condition.

**A parent's decision to allow his or her child to ride this product should be based on the child's maturity, skill and ability to follow rules.**

Keep this product away from small children younger than age 14 and remember that this product is intended for use only by persons who are, at a minimum, completely comfortable

## MINI MOTORCYCLE OWNER'S MANUAL

### INTRODUCTION

Thank you for purchasing this product. The proper care and maintenance that your vehicle requires is outlined in this manual. Following these instruction will ensure a long trouble-free operating life of this vehicle and your satisfaction with it.

### SAFETY WARNINGS

This vehicle is NOT A TOY and ONLY used in closed off areas remote from public road traffic. Never permit children under age 14 to operate this vehicle. Adult's supervision is required if children under age 16.

#### WARNING:

Riding this vehicle can be a hazardous activity. Certain conditions may cause the equipment to fail without fault of the manufacturer. Like other vehicles, the Mini Dirt Bike can and is intended to move, and it is therefore possible to lose control, fall off and/or get into dangerous situations that no amount of care, instruction or expertise can eliminate. If such things occur you can be seriously injured or die, even when using safety equipment and other precautions. RIDE AT YOUR OWN RISK AND USE COMMON SENSE.

This manual contains many warnings and cautions concerning the consequences of failing to maintain, inspect or properly use your mini dirt bike. Because any incident can result in serious injury or even death, we do not repeat the warning of possible serious injury or death each time such a possibility is mentioned.

#### APPROPRIATE RIDER USE AND PARENTAL SUPERVISION

This manual contains important safety information and use tips to help you and your child operate and handle the mini dirt bike. Carefully read the manual in its entirety together with your child before letting your child ride it for first time. The manual also contains important information on servicing the vehicle.

It is your responsibility to review the manual and make sure that all riders understand all warnings, cautions, instructions and safety topics and assure that the riders are able to safely and responsibly use this product and protect your child from injury. We recommend that you periodically review and reinforce the information in this manual with your child, and that you inspect and maintain your children's vehicle to insure their safety. **The recommended rider age of 14 years** is only an estimate, and can be affected by the rider's size, weight or skills. Any rider unable to fit comfortably on the mini dirt bike should not attempt to ride it.

**It is important and necessary to conduct the technical training for your child before first use. To get the training information, please contact the dealer who you purchase the vehicle from. Before your child complete the training, do not let your child use this vehicle.**

Children often underestimate or fail to recognize the dangerous situation, you should make it clear to your child that should not, under any circumstances, operate the vehicle without supervision and that your child may only drive at speed that are commensurate with the child's riding ability and other road condition.

**A parent's decision to allow his or her child to ride this product should be based on the child's maturity, skill and ability to follow rules.**

Keep this product away from small children younger than age 14 and remember that this product is intended for use only by persons who are, at a minimum, completely comfortable

2 STROKE 49CC

# MINI MOTORCYCLE

## OWNER'S MANUAL

Important Information! Read thoroughly before driving the first time.

All information, images and specifications contained in this manual are based on the latest product information available at the time of publication. Due to improvements or production changes, there could be discrepancies in this manual. We reserve the right to make product changes at any time, without notice and without obligation to make the same or similar changes to any vehicle previously built or sold.



2 STROKE 49CC

# MINI MOTORCYCLE

## OWNER'S MANUAL

Important Information! Read thoroughly before driving the first time.

All information, images and specifications contained in this manual are based on the latest product information available at the time of publication. Due to improvements or production changes, there could be discrepancies in this manual. We reserve the right to make product changes at any time, without notice and without obligation to make the same or similar changes to any vehicle previously built or sold.





COMPONENT LOCATION



1. Stop Switch	2. Rear brake lever
3. Front brake lever	4. Throttle
5. Tank cap	6. Seat
7. Plastic body	8. Front wheel
9. Pull starter	10. Exhaust pipe
11. Rear wheel	12. Rear disk brake
13. Chain cover	14. Chain adjuster
15. Chain	16. Gear box
17. Foot rest	18. Side stand
19. Forks	20. Front disk brake
21. Rear shock absorber	22. Handle bar
23. On/Off Key switch	



and competent while operating the vehicle

Do not exceed **75kgs** total weight on this vehicle. Rider weight does not necessarily mean a person's size is appropriate to fit or maintain control of this vehicle.

Do not touch the brakes or motor on your bike when in use as they can become very hot.

ACCEPTABLE RIDING PRACTICES AND CONDITIONS

Always check and obey any local laws or regulations which may affect the locations where the vehicle may be used.

Ride defensively. Watch out for potential objects that could catch your heel or force you to swerve suddenly or lose control. Be careful to avoid pedestrians, skaters, skateboards, scooters, bikes, children or animals who may enter your path, and respect the rights and property of others.

This vehicle is meant to be used only in controlled environments free of potential traffic hazards and not on public streets or sidewalks. Do not ride your vehicle in any areas where pedestrians or product traffic is present.

Do not activate the speed control on the hand grip unless you are on the vehicle and in a safe, outdoor environment suitable for riding.

The vehicle was manufactured for performance and durability but are not impervious to damage. Jumping or other aggressive riding can over-stress and damage any product, including this vehicle, and the rider assumes all risks associated with high-stress activity. Be careful and know your limitations. Risk of injury increased as the degree of riding difficulty increases. The rider assumes all risk associated with aggressive riding activities.

Never use headphones or a cell phone when riding.

Never hitch a ride with another vehicle.

Do not ride the vehicle in wet or icy weather and never immerse the vehicle in a water, as the electrical and drive components could be damaged by water or create other possibly unsafe conditions.

The vehicle is intended for use on flat, level ground without loose debris such as rocks or gravel. Wet, slick, bumpy, uneven or rough surfaces may impair traction and contribute to possible accidents. Do not ride the vehicle in mud, ice, puddles or water. Avoid excessive speed that can be associated with downhill rides. Never risk damaging surfaced such as a carpet or flooring by use of the vehicle in doors.

Do not ride at night or when visibility is limited

PROHIBITED ITEMS

★ Do not touch brakes, motor or exhaust when the vehicle is in use as they can become very hot.



PIN LOCATION



PIN is stamp marked on an aluminum plate that is riveted on the rear swing arm. PIN means the Product Identify Number which is unique for each unit.

BEFORE YOU BEGIN

Remove contents from box. Inspect the contents of the box for scratches in the paint, dents or kinked cables that may occur during shipping. Because the product was 85 percent assembled and packed at the factory, there should not be any problems, even if the box has a few scars or dents.

**Estimated Assembly and Set-Up Time**  
We recommend assembly by an adult with experience in motorbike or bicycle mechanics. Allow up to 30-40 minutes for assembly.

**Required Tools**  
Some tools may be supplied; however, we recommend the use of mechanic's grade tools. Use the supplied tools only as a last resort.  
The list of tool required is as follows:  
·Open end wrench 10mm / 13mm/ 17mm / 22mm  
·Allen wrench 5mm / 6mm/ 8mm

Assembly illustration and instruction

ASSEMBLY HANDLE BAR

**WARNING:** Failure to properly adjust and tighten the bolts that affix the handlebar can cause you lose control and crash.

Warning:

The brake is capable of causing the bike to skid the tire throwing an unsuspecting rider. Practice in an open area free from obstacles until you are familiar with the brake function. Avoid skidding to stop as this can cause you lose control or damage the rear tire.

Testing the Brakes

To use the brake, squeeze the lever to increase the pressure on the brake. The brake lever is fitted with a cable adjuster to compensate for cable stretch and/or to fine-tune the lever movement to brake engagement. If brake is not engaging properly, follow instructions for adjusting the brakes.

Chain and sprocket

The chain will typically have a "loose spot" and "tight spot" corresponding with a particular sprocket rotational position. This is normal and common to all chain-driven products due to run-out to tolerance of the free wheel and sprocket. The chain should be adjusted to the ideal tension with chain in the tightest spot.

Proper chain alignment must be maintained. The wheel must not be skewed, if the chain is noisy or rough running, check the lubrication, tension and alignment of sprockets, in that order.

Warning:

To avoid a pinch or injury, keep fingers away from moving sprockets and chain.

● CHECKS AFTER CLEANING

After cleaning the motorcycle, it is good practice to:




·Lubricate the articulated joints A on the rear suspension.

·Carefully clean and dry the chain-gear-position assembly and then apply grease thoroughly in order to keep these parts in good condition as long as possible.

·Dry well any metal parts subject to corrosion, oxidation, etc.

Set the silver choke lever B to the top position – FULLY UP.

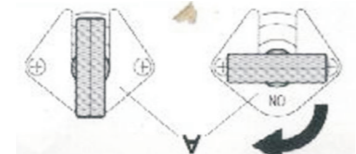

Turn the white fuel tap / lever A to vertical (on).

STARTING THE BIKE

After the first off-road use, check all of the nuts and bolts.

**Warning:** Only use semi synthetic motorcycle 2-stroke pre mix oil, available from motorcycle shops. Most motorcycle shops. If you use the wrong oil or mix the fuel and oil incorrectly you will cause major starting problems, and possibly terminal engine damage.



Remove tank cap. The fuel tank will hold approximately 1 liter. Only use green fuel mixture with 4% oil.

OPERATION AND MAINTNANCE

● Fueling operations

Wash the vehicle carefully after every off-road use.

On cold days, warm up the engine by running it at idle speed for a few minutes before starting. Check the pressure, general condition and thickness of tread.

Proceed as follows:  
When to these procedures will save you time and money, and will make riding much safer.

a number of checks and maintenance operations before and after use. Just a few minutes in order to avoid problems connected to the operation of the vehicle, it is advisable to perform

● Checks and maintenance before and after off-road use

Use a sport drive only on race circuits.  
disturb persons and animals.  
During off road use, do not damage the environment, avoid noise and everything that can We strongly recommend you to drive steadily, without strong acceleration and deceleration The noise and the pollution of every vehicle depend on how it is driven.

ECOLOGIC DRIVE

- Engine bolts and nuts
- Rear sprocket
- Shock absorber
- Engine sprockets (Racing version only)
- Footrest

paid to the following parts:

We recommend checking all tightenings after the first time use. Special attention should be

ATTENTION

Always wear proper protective equipment such as an approved safety helmet, elbow pads and kneepads. Always wear shoes (lace-up shoes with rubber soles), never drive barefooted or in sandals, and keep shoelaces tied and out of the way of the wheels, motor and drive system.

Safety Gear

Periodically inspect the tires for excess wear, and regularly check the tire pressure and re-inflate as necessary. If you get a flat tire, the inner tube can be patched or a new tube can be purchased from an authorized repair shop.

The Inflation

Check for cracks or broken connections. Although broken frames are rare, it is possible for an aggressive driver to bash into a curb or wall and wreck and bend or break a frame. Get in the habit of inspecting yours regularly.

Frame, Fork and Handbars

Check the brake for proper function. When you squeeze the lever, the brake should provide positive braking action.

Brake


Check and secure all fasteners before every ride. Make sure steering stem clamp bolts are locked properly in place. There should not be any unusual rattles or sounds from loose parts or broken components. If you are not sure, ask an experienced mechanic to check.

Loose Parts


PRE-RIDE CHECKLIST

Rear suspension	mono shock absorber
Tyre	front & rear 2.50-10 with 4.00 P.s.i operation pressure and 36 P.s.i Max. Inflation
Brake system	front and rear disc brake with mechanical control
Fuel tank capacity	12 L

ASSEMBLY FRONT WHEEL AND REAR SHOCK ABSORBER

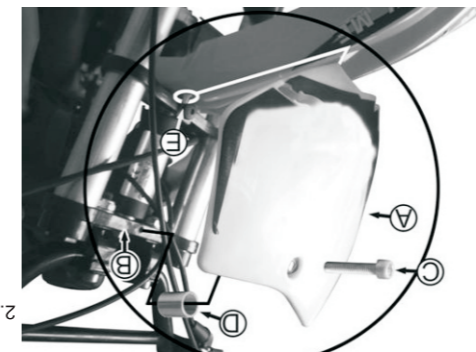

ASSEMBLY MUDGUARD

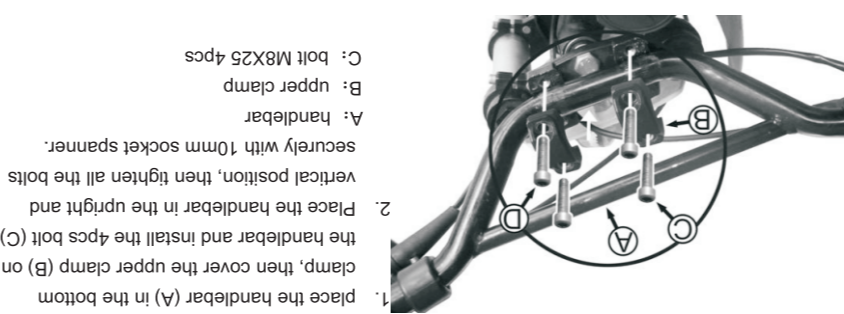


1. Fix the number board (A) into the location pillar of mudguard (E) upper splintage (B) and tighten the bolt with 10mm socket spanner.
2. Install the bolt (C), bush (D) into the upper splintage (B) and tighten the bolt with 10mm socket spanner.
3. Number board
4. Upper splintage
5. Bolt M6x35
6. Bush
7. location pillar

1. mount 2pcs of bolts A (M6x10) on the down splintage and tighten it. mount 1pc of bolt B (M6x10) on the down splintage and tighten it.
2. place the handlebar (A) in the bottom clamp, then cover the upper clamp (B) on the handlebar and install the 4pc bolt (C) vertically, then tighten all the bolts securely with 10mm socket spanner.
3. A: handlebar
4. B: upper clamp
5. C: bolt M6x25 4pcs

Check

To check the wear of front and rear brake pads A, simply inspect the brakes calipers as shown in the below picture.

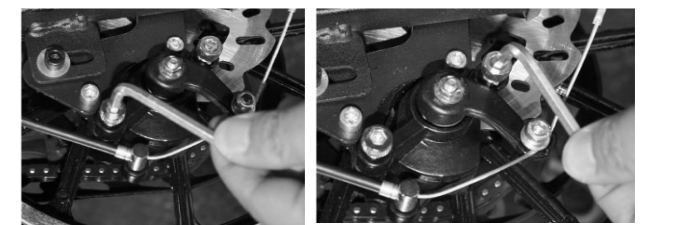

The thickness of the lining on the ends of the four pads should never be less than 1mm. Should the lining be thinner, immediately replace the brake pads.

We recommend having the brake pads replaced by an authorized dealer.

Step 3: If the brake rotor is dragging on the brake pads, use L-wrench to twist the caliper bolts in either direction until rotor is centered between pads.




Step 2: If the brake has too much slack, loosen the rear anchor bolt with a L-wrench and pull the brake wire tighter. The distance of the brake wire between the end of the cable and the anchor bolt should be between 37mm and 44 mm.



Step 1: To adjust the brake tension, thread the brake lever adjuster in or out 1/4 or 1/2 turn until the required brake adjustments is attained. Most of brake adjustments are complete at this step. If the brake still needs the further adjustment, proceed to step 2.


Adjusting Brake



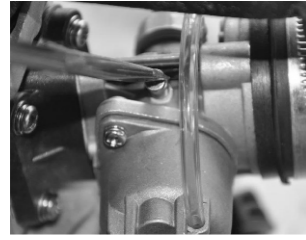

**ADJUSTMENT OF IDLING SPEED**

In order to perform this operation correctly, we advise you to do it when the engine is hot, connecting an electric revolution counter to the spark plug wire. Then use a screwdriver on register screw on carburetor to calibrate the minimum.

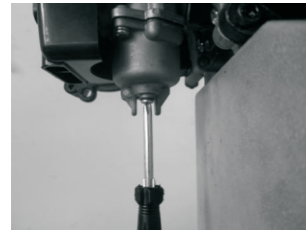


**CAUTION**

Always release the remaining fuel from the carburetor after use every time following the below steps

1. use a screwdriver to screw out the drain plug at the bottom of carburetor.
2. release the remaining fuel.
3. use a screwdriver to tighten the drain plug securely.


**CIRCUIT DIAGRAM**

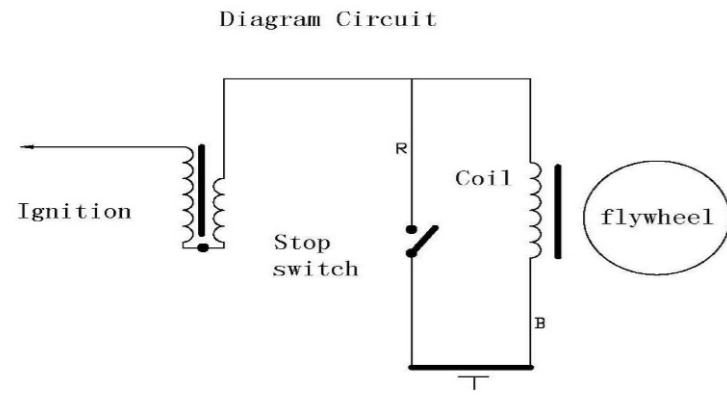

R: Red  
B: Black

**WARNING DECALS**

Sticker A is located on one side of fuel tank.

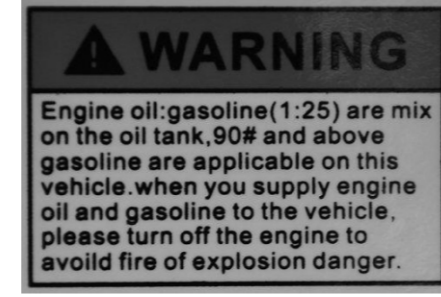

Sticker B is located on the seat or rear fender.



Sticker C is located on the exhaust pipe cover.

★ This vehicle should use mixture of the unleaded gasoline and the two cycle engine oil. The volume ratio is 25:1. Do not use any degraded fuel (which smells sour) or fuel of wrong mixture ratio. It will cause a poor start, insufficient output or damage the engine.

★ Do not use 4 cycle engine oil. (Otherwise, it causes the plug to be degraded, the piston ring to seize or the exhaust to be clogged)

★ Do not run the engine in a room or poor ventilated area. (the exhaust gas includes odorless but hazardous carbon monoxide.)

★ Do not put your fingers and other body parts near to the drive chain, steering system, wheels and all other moving components.

★ Do not store, spill or use any gasoline near fire, stove, oven, boiler or other instruments which uses a pilot light or spark. (Otherwise, it may cause an explosion.)

★ Smoking is strictly prohibited while refilling the fuel

★ While the engine is running or while it remains hot soon after stopping, do not remove the Lid of the fuel tank or refill the fuel. (Before refilling the fuel, stop the engine and cool it down 2 minutes or more)

★ If any gasoline is spilt or smelled or any danger of explosion felt, do not run the engine.

★ Do not check any spark while keeping the spark plug removed.

★ Do not run the engine with the exhaust or air cleaner cover removed.

★ Do not touch any hot exhaust or engine part. (Otherwise, it may cause a burn.)

★ When the engine runs, do not touch any spark plug cap or high tension cord. (Otherwise, it may cause an electric shock and harm you body)

★ Never use alcohol or drugs before or while operating.

★ You insurance policy may not provide coverage for accidents involving the use of this vehicle. Consulting your insurance agent before using this vehicle.


**PROPER RIDING ATTIRE**

Always wear proper protective equipment such as an approved safety helmet, elbow pads and kneepads. A helmet may be legally required by local law or regulation in your area. A long-sleeved shirt, long pants and gloves are recommended. Always wear athletic shoes, never drive barefooted or in sandals, and keep shoelaces tied and out of the way of the wheels, motor and drive system.


**FAILURE TO USE COMMON SENSE AND HEED THE ABOVE WARNINGS INCREASES RISK OF SERIOUS INJURY. USE WITH APPROPRIATE CAUTION AND SERIOUS ATTENTION TO SAFE OPERATION.**

**TROUBLESHOOTING**

PROBLEM	CAUSE	REMEDY
The engine doesn't start	-Fuel system (tubes, fuel tank, valve) is blocked	Check fuel line for any kinks or blocks. Make sure there is fuel in the fuel filter. Undo drain plug from bottom of carburetor to check fuel is reaching the carburetor. Turn the Air mixture/ tick over screw on the carburetor clockwise 1/2 or 1 full turn. (Brass screw with spring)
	-No current arriving at spark plug	Clean or replace spark plug. Check spark plug for strong BLUE spark
Engine misfires	-Spark plug has irregular electrode distance	Restore correct distance
	-Spark plug is dirty	Clean or replace
Engine overheats and loses power	-Silencer partially obstructed	Contact an authorized dealer
	-Exhaust clearance partially obstructed	Contact an authorized dealer
	-Mix too lean	Jet may be partially obstructed
Weak brake	-Delayed ignition	Contact an authorized dealer
	-Worn Brake pads	Contact an authorized dealer

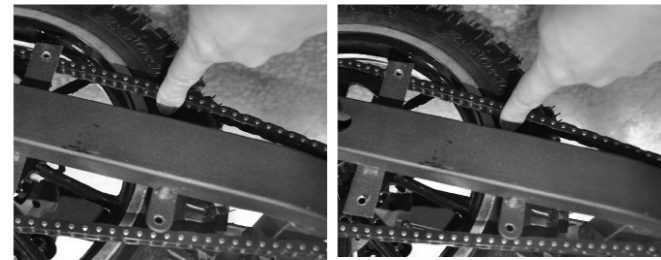

**Step 3:** With the bike's wheels on the ground, check slack in the lower drive chain. Lock all the nuts and screws, check the wheel alignment and then re-attach the chain cover. The midpoint of the lower chain should be between 8mm-12mm. Approximately halfway between the sprockets. Correct drive chain slack (vertical free play) at

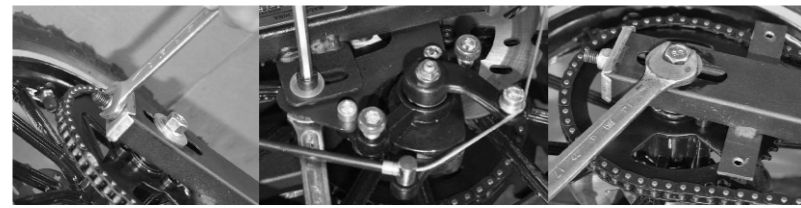

**Step 2:** Loosen the rear wheel axle nut with 17mm and 14mm open spanner, then lose the screw of caliper bracket, adjust the chain adjuster.




**Step 1:** Use the L wrench to remove 3pcs of screws and take off the chain cover.

Always keep it lubricated and tighten the chain as follows:


**Adjusting chain**

When replacing the spark plug, screw it in by hand until it stops, then tighten with a wrench. Immediately.

**NOTE:** The tires are inflated when your shipped, but they invariably lose some pressure between the point of manufacturing and your purchase. Always inflate the tires to the correct PSI before first time use.  
Using a bicycle-style tire pump to inflate the tire to the PSI indicated on the sidewall of the tire. Please read the specification sheet to get the information of tire pressure.  
High-volume automobile tires. If you decide to use such an air supply to inflate your tires, first make sure the pressure gauge is working, then use very.

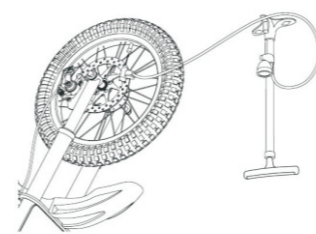

**INFLATING THE TIRES**

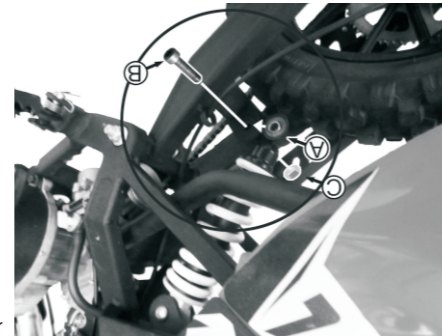

- A: shock absorber
- B: bolt M8X40
- C: nut M8

open end wrench

mounting hole and shock joint and tighten the nut (C) securely with 10mm and 13mm

2. Fix the bolt (B) through the shock

mounting hole to the shackle joint hole.

1. Uplift the frame to align the shock (A)



- A: wheel
- B: wheel axle M12X170
- C: nut M12
- D: bush 16X1.5X7 1pc
- E: brake disc

and tighten it.

in sequence, and then fix the nut (C)

bush (D), wheel, bush (D) and right fork.

2. mount the axle (B) through the left fork,

caliper pad.

place the disc (E) between the brake

1. put the wheel (A) on the right position to

Engine type	single cylinder, 2 stroke, forced air cooling
Power output	2.0kw/7500rpm
Max torque	2.3 Nm/5600rpm
Displacement (ml)	49
Fuel	Petrol mixed with 4% 2-stroke engine oil
Compression Ratio	7.5 : 1
Transmission	automatic with centrifugal clutch
Start method	manual pull start
Max speed (km/h)	40
Front suspension	Telescopic fork

**TECHNICAL SPECIFICATION SHEET**

**TECHNICIAN**  
The aging is unavoidable even if the tire is not used. The aging is mainly reflected in the cracked section on side of tire and tread, sometimes the tire is distorted as well. The used and aged tire should be checked and confirmed if it is ok to use again by an authorized technician

**The aging**  
Don't use the used tire if you are not sure its previous service condition.

**The replacement**  
It is important to use the correct size and standard tire as per our specification (see details in technical specification sheet)

**The maintenance**  
The tread depth should be checked regularly. (Shallow tread means less grip of tire). You must stop to use the vehicle if the tire is pierced, disassemble the tire and check it carefully. The maintenance should be done by an authorized technician. Tire should be replaced immediately when it is distorted or damaged.

**The inflating pressure**  
The inflating should be done while the tire is cold. It is very important to keep the tire in proper pressure and check the tire pressure before use.

**The assembly and disassembly**  
It is strongly recommended that the tire assembly and disassembly should be done by an authorized technician with necessary skills.

**Important information of use guide for tire**  
Note: Tire is the only contact between the vehicle to the road, the safety of various driving activity depends on the small area of tire where contact with the road. Therefore, it is very important to keep the tire in good condition any time and use the correct size and standard tire to replace the old ones.

short bursts to inflate to the correct PSI. If you inadvertently over-inflate the tire, release the excess pressure immediately.

0.6 mm. If it is not, it may be corrected by bending the earth electrode.  
Check as well that there are no cracks in the insulation or corroded electrodes. If so, replace

Examine the distance between the electrodes with a feeler. This distance should be from 0.5 to 1.0 mm. To perform the check, simply slide off the electrical connection tube and unscrew the spark plug.

Keeping the spark plug in good condition will reduce fuel consumption and increase engine performance.

**SPARK PLUG**

Clean the filter every time the vehicle is used in cross country.  
with water and soap.

**AIR FILTER**  
Air filter A is located under the rear shock absorber, and is directly connected to the carburetor by rubber manifold B. To remove the filter, loosen clamp screw C, then pull out the filter and clean it.

NOT PULLING AS HARD AS POSSIBLE!

**DON'T BE AGGRESSIVE WITH THE PULL START - IT'S TECHNIQUE THAT COUNTS**



Pull the pull start cord out to the very end and release. Slightly turn the throttle twist grip at the same time.

