

HP
2017

ELECTRIC

MINI MOTORCYCLE

OWNER'S MANUAL

Important Information! Read thoroughly before driving the first time.

All information, images and specifications contained in this manual are based on the latest product information available at the time of publication. Due to improvements or production changes, there could be discrepancies in this manual. We reserve the right to make product changes at any time, without notice and without obligation to make the same or similar changes to any vehicle previously built or sold.



ELECTRIC MINI MOTORCYCLE OWNER'S MANUAL

INTRODUCTION

Thank you for purchasing this product. The proper care and maintenance that your vehicle requires is outlined in this manual. Following the instruction will ensure a long trouble-free operating life of this vehicle and your satisfaction with it.

The owner's manual corresponded to the latest state of this vehicle at the time of printing. Slight deviations resulting from continuing development and design can, however, not be completely excluded. All specifications are non-binding, we reserve the right to modify or delete technical specification, parts, design, etc... without prior notice.

SAFETY WARNINGS

This vehicle is NOT A TOY and ONLY used in closed off areas remote from public road traffic.

Never permit children under age **14** to operate this vehicle.

Adult's supervision is required if children under age **16**.

WARNING:

Riding this vehicle can be a hazardous activity. Certain conditions may cause the equipment to fail without fault of the manufacturer. Like other vehicles, the Mini Dirt Bike can and is intended to move, and it is therefore possible to lose control, fall off and/or get into dangerous situations that no amount of care, instruction or expertise can eliminate. If such things occur you can be seriously injured or die, even when using safety equipment and other precautions. **RIDE AT YOUR OWN RISK AND USE COMMON SENSE.**

This manual contains many warnings and cautions concerning the consequences of failing to maintain, inspect or properly use your mini dirt bike. Because any incident can result in serious injury or even death, we do not repeat the warning of possible serious injury or death each time such a possibility is mentioned.

APPROPRIATE RIDER USE AND PARENTAL SUPERVISION

This manual contains important safety information and use tips to help you and your child operate and handle the mini dirt bike. Carefully read the manual in its entirety together with your child before letting your child ride it for first time. The manual also contains important information on servicing the vehicle.

It is your responsibility to review the manual and make sure that all riders understand all warnings, cautions, instructions and safety topics and assure that the riders are able to safely and responsibly use this product and protect your child from injury. We recommend that you periodically review and reinforce the information in this manual with your child, and that you inspect and maintain your children's vehicle to insure their safety. **The recommended rider age of 14 years** is only an estimate, and can be affected by the rider's size, weight or skills. Any rider unable to fit comfortably on this vehicle should not attempt to ride it.

It is important and necessary to conduct the technical training for your child before first use. To get the train information, please contact the dealer who you purchase the vehicle from. Before your child complete the training, do not let your child use this vehicle.

Children often underestimate or fail to recognize the dangerous situation, you should make it clear to your child that should not, under any circumstances, operate the vehicle without supervision and that your child may only drive at speed that are commensurate with the child's riding ability and other road condition.

A parent's decision to allow his or her child to ride this vehicle should be based on the child's maturity, skill and ability to follow rules.

ELECTRIC MINI MOTORCYCLE OWNER'S MANUAL

Keep this product away from small children younger than age 14 and remember that this product is intended for use only by persons who are, at a minimum, completely comfortable and competent while operating the vehicle

Do not exceed **75kgs** total weight on this vehicle. Rider weight does not necessarily mean a person's size is appropriate to fit or maintain control of this vehicle.

Do not touch the brakes or motor on your bike when in use as they can become very hot.

ACCEPTABLE RIDING PRACTICES AND CONDITIONS

Always check and obey any local laws or regulations which may affect the locations where the vehicle may be used.

Ride defensively. Watch out for potential objects that could catch your heel or force you to swerve suddenly or lose control. Be careful to avoid pedestrians, skaters, skateboards, scooters, bikes, children or animals who may enter your path, and respect the rights and property of others.

This vehicle is meant to be used only in controlled environments free of potential traffic hazards and not on public streets or sidewalks. Do not ride your vehicle in any areas where pedestrians or product traffic is present.

Do not activate the throttle (speed control) on the hand grip unless you are on the vehicle and in a safe, outdoor environment suitable for riding.

The vehicle was manufactured for performance and durability but not impervious to damage. Jumping or other aggressive riding can over-stress and damage any product, including this vehicle, and the rider assumes all risks associated with high-stress activity. Be careful and know your limitations. Risk of injury increased as the degree of riding difficulty increases. The rider assumes all risk associated with aggressive riding activities.

Maintain a hold on the handlebars at all times.

Never carry passengers or allow more than one person at a time to ride the vehicle.

Never use near steps or swimming pools.

Keep your fingers and other body parts away from the drive chain, steering system, wheels and all other moving components.

Never use headphones or a cell phone when riding.

Never hitch a ride with another vehicle.

Do not ride the vehicle in wet or icy weather and never immerse the vehicle in water, as the electrical and drive components could be damaged by water or create other possibly unsafe conditions.

ELECTRIC MINI MOTORCYCLE OWNER'S MANUAL

The vehicle is intended for use on flat, level ground without loose debris such as rocks or gravel. Wet, slick, bumpy, uneven or rough surfaces may impair traction and contribute to possible accidents. Do not ride the vehicle in mud, ice, puddles or water. Avoid excessive speed that can be associated with downhill rides. Never risk damaging surfaced such as a carpet or flooring by use of the vehicle in doors.

Do not ride at night or when visibility is limited.

PROPER RIDING ATTIRE

Always wear proper protective equipment such as an approved safety helmet, elbow pads and kneepads. A helmet may be legally required by local law or regulation in your area. A long-sleeved shirt, long pants and gloves are recommended. Always wear athletic shoes, never drive barefooted or in sandals, and keep shoelaces tied and out of the way of the wheels, motor and drive system.

USING THE CHARGER

The charger supplier with the vehicle should be regularly examined for damage to the cord, plug, enclosure and other parts, and in the event of any damage, the bike must not be charged until the charger has been repaired or replaced.

Use only with the recommended charger.

Use caution when charging.

The charger is not a toy. Charger should be operated by an adult.

Do not operate charger near flammable materials.

Unplug charger and disconnect from bike when not in use.

Always disconnect from the charger prior to wiping down and cleaning the vehicle with liquid.


FAILURE TO USE COMMON SENSE AND HEED THE ABOVE WARNINGS INCREASES RISK OF SERIOUS INJURY. USE WITH APPROPRIATE CAUTION AND SERIOUS ATTENTION TO SAFE OPERATION.

ELECTRIC MINI MOTORCYCLE OWNER'S MANUAL

LOCATION OF WARNING STICKER




PIN LOCATION

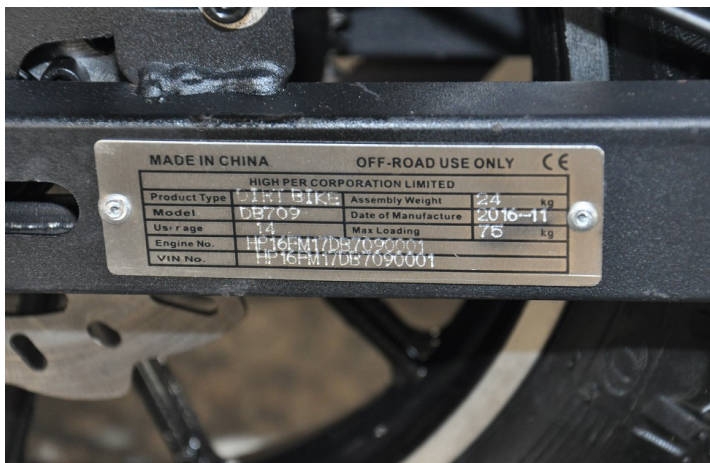

PIN is stamp marked on an aluminum plate that is riveted on the rear swing arm.
PIN means the Product Identify Number which is unique for each unit.

ELECTRIC MINI MOTORCYCLE OWNER'S MANUAL

DRIVE CONTROLS

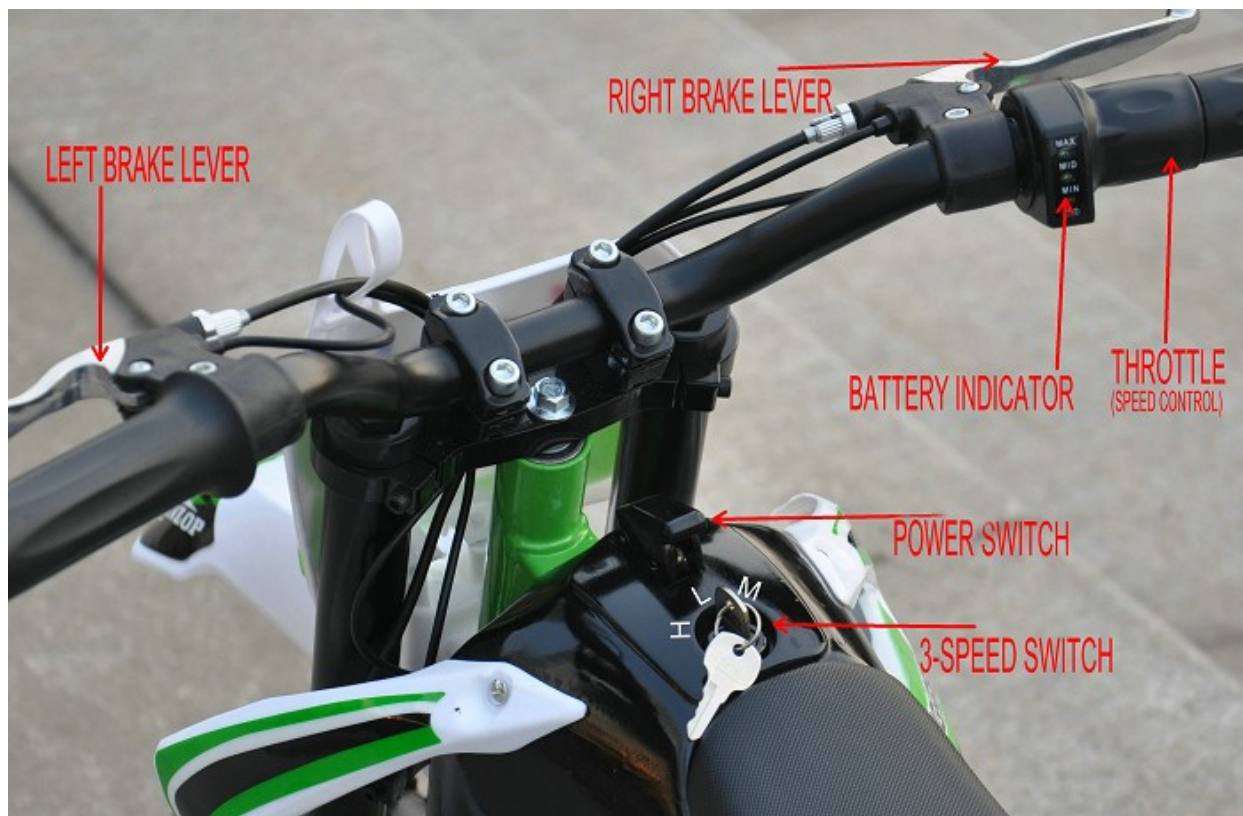

BATTERY INDICATOR

Note: STOP use the bike and charge the battery once the indicator turns into red and yellow light only.

FUNCTION SWITCH OF 3-SPEED LIMIT ADJUSTABLE

The 3-speed limit switch is located in front of the seat.

There are 3 letters standing for the different speed as follows,

H: Highest top speed around 24KMph.

L: Lowest top speed around 8KMph.

M: Middle top speed around 16KMph.

BEFORE YOU BEGIN

Remove contents from box. Remove the foam separators that protect the components from damage during shipping. Inspect the contents of the box for scratches in the paint, dents or kinked cables that may occur during shipping. Because the product was 85 percent assembled and packed at the factory, there should not be any problems, even if the box has a few scars or dents.

MAKE SURE KEY SWITCHES IS TURNED “OFF” BEFORE CONDUCTING ANY PROCEDURES.

Estimated Assembly and Set-Up Time

ELECTRIC MINI MOTORCYCLE OWNER'S MANUAL

We recommend assembly by an adult with experience in motorbike or bicycle mechanics.
Allow up to 30-40 minutes for assembly.
Allow up to 4-8 hours for initial charge.

Required Tools

Some tools may be supplied; however, we recommend the use of mechanic's grade tools. Use the supplied tools only as a last resort.


The list of tool required is as follows

- Open end wrench 10mm / 13mm/ 17mm / 22mm
- Allen wrench 5mm / 6mm/ 8mm

Assembly illustration and instruction

ASSEMBLY HANDLEBAR

Caution: Failure to properly adjust and tighten the bolts that affix the handlebar can cause you lose control and crash.

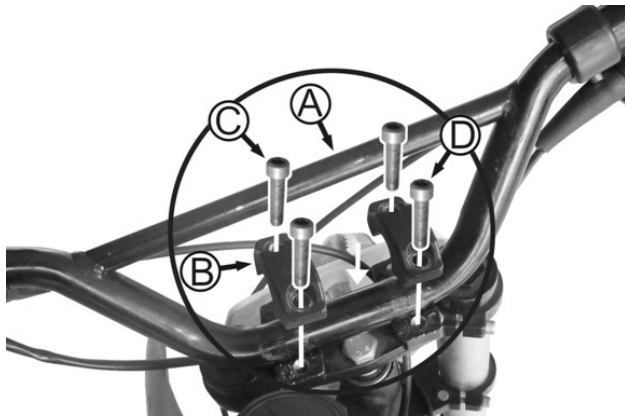

1. place the handlebar (A) in the bottom clamp, then cover the upper clamp (B) on the handlebar and install the 4pcs bolt (C)
2. Place the handlebar in the upright and vertical position, then tighten all the bolts securely with 10mm socket spanner.

A: handlebar

B: upper clamp

C: bolt M8X20 4pcs


ASSEMBLY MUDGUARD



1. mount 2pcs of bolts A (M6x16) on the down splintage and tighten it.
2. mount 1pc of bolt B (M6x12) on the down splintage and tighten it

ASSEMBLYNUMBER BOARD

ELECTRIC MINI MOTORCYCLE OWNER'S MANUAL

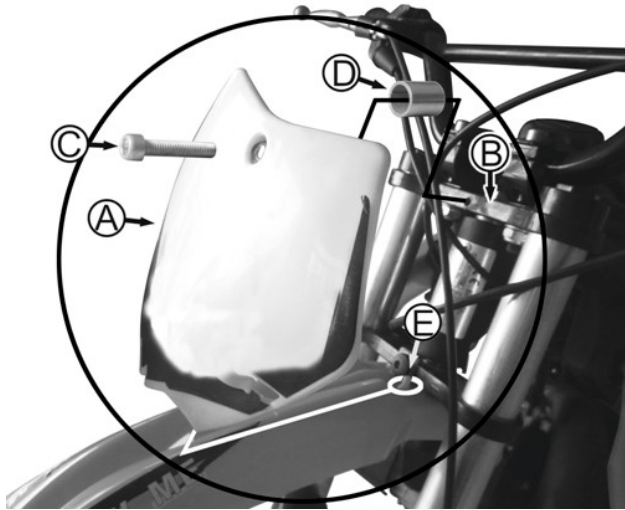

1. Fix the number board (A) into the location pillar of mudguard (E)
2. Install the bolt (C), bush (D) into the upper splintage (B) and tighten the bolt with 10mm socket spanner.


A: Number board
B: upper splintage
C: bolt M6X30
D: bush
E: location pillar

ASSEMBLY FRONT WHEEL AND REAR SHOCK ABSORBER



1. put the wheel (A) on the right position to place the disc (E) between the brake caliper pad.
2. mount the axle (B) through the left fork, bush (D), wheel, bush (D) and right fork in sequence, and then fix the nut (C) and tighten it.

A: wheel
B: wheel axle M12X160
C: nut M12
D: bush 16X1.2X13 2pcs
E: brake disc

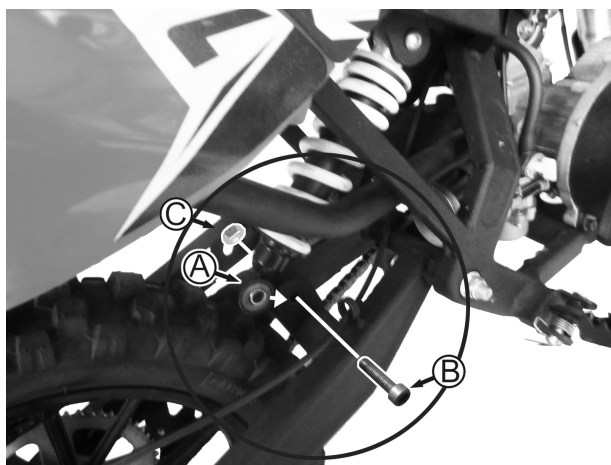


1. Uplift the frame to align the shock (A) mounting hole to the shackle joint hole.
2. Fix the bolt (B) through the shock mounting hole and shackle joint and tighten the nut (C) securely with 10mm and 13mm open end wrench

A: shock absorber
B: bolt M8X40
C: nut M8

INFLATING THE TIRES

ELECTRIC MINI MOTORCYCLE OWNER'S MANUAL

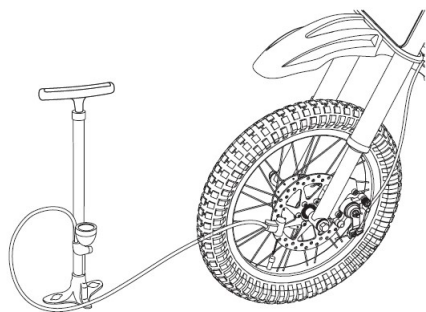

NOTE: The tires are inflated when shipped, but they invariably lose some pressure between the point of manufacturing and your purchase. Always inflate the tires to the correct PSI before first time use.

Please read the specification sheet to get the information of tire pressure.

Using a bicycle-style tire pump to inflate the tire to the PSI indicated on the sidewall of the tire.

Note: The pressurized air supplies found at gasoline stations are designed to inflate high-volume automobile tires. If you decide to use such an air supply to inflate your tires, first make sure the pressure gauge is working, then use very short bursts to inflate to the correct PSI. If you inadvertently over-inflate the tire, release the excess pressure immediately.

Important information of use guider for tire

Note: Tire is the only contact between the vehicle to the road, the safety of various driving activity depends on the small area of tire where contact with the road. Therefore, it is very important to keep the tire in good condition any time and use the correct size and standard tire to replace the old ones.

Guide:

Tire assembly and disassembly

It is strongly recommended that the tire assembly and disassembly should be done by an authorized technician with necessary skills.

Tire inflating pressure

It is very important to keep the tire in proper pressure and check the tire pressure before use.

The inflating should be done while the tire is cold.

Tire maintenance

Tire tread depth should be checked regularly.(Shallower tread means less grip of tire). You must stop to use the vehicle if the tire is pierced, disassemble the tire and check it carefully.

Tire maintenance should be done by an authorized technician. Tire should be replaced immediately when it is distorted or damaged.

Tire replacement

It is important to use the correct size and standard tire as per our specification (see details in technical specification sheet)

Don't use the used tire if you are not sure its previous service condition.

Tire aging

ELECTRIC MINI MOTORCYCLE OWNER'S MANUAL

Tire aging is unavoidable even the tire is not ever used or just used a few times. Tire aging is mainly reflected in the cracked section on side of tire and tire tread, sometimes the tire is distorted as well. The used and aged tire should be checked and confirmed if it is ok to use again by an authorized technician

BEFORE RIDING

Charging the Battery

You shall use the charger which should match this bike (never use a charger from a different model). Before charging, you must turn the power switch to "OFF". Keep the charger in a dry and ventilative condition when it's working.

The charger is designed for indoor use only. Keep the charger away from water to avoid short circuit. Don't even use it in a dampening, combustible or explosive environment. Do not remove the plug by pulling the cord, always grip the charging port by its metal body.

Firstly connect the output plug of the charger with the socket of the battery case properly, and then insert the input plug into the AC electrical outlet. And the charger indicator will light on, which means it's on charging.

When the light turns from Red to Green, it means the battery has been fully charged. Usually it will take about 4-6 hours to recharge the battery depend on different status. However, it's a good suggestion that it's be charged for additional 2 hours after the light turn to green if you have time (It is good for the service life of the battery).

Do not charge it for more than 10 hours to avoid overcharging and damaging the battery. After the light turns GREEN, the charger is in the state of trickle electric current and "fill slowly " and maintain the state. If you are going to be out for a long time, you should pull out the charger plug, especially in hot weather.

The charger will become warm during charging, so keep charger away from any heat source. Please always keep the charger dry and clean. The electronics inside contain high voltage, so please don't disassemble the charger by yourself.

After charging, please pull the input plug out of the electrical outlet first, and then pull out the output connecting plug from the battery case. Do not let the charger plugged into the battery or electrical outlet for a long time, which may damage the charger and cause the fire.

While charging, please keep it out of the reach of children. Do not put anything on top of the charger when use, and prevent any liquid, metal or metal fillings to permeate into the charger. You can also remove the battery from the bike and then charge it.

ELECTRIC MINI MOTORCYCLE OWNER'S MANUAL

Do not touch any poles in the battery case with your hands when the battery is removed for charging. Also the charging connector poles cannot be touched with any metal or any other material that conducts electricity, otherwise it may cause short circuit.

If you don't ride your bike for a long time, the battery should be charged at least one time per month. This will ensure the battery life. DO NOT use in the state of low battery capacity. Do not leave your battery in a fully discharge state for long periods of time. The battery will continue to self-discharge, resulting in damage.

Avoid any contact with water when charging your battery. If a plug or socket gets wet, dry it completely before using.

When charging, if there is a peculiar smell or the temperature is extremely high, please stop charging immediately and send to the local distributor or to the Customer Service Center.

WARNING: rechargeable batteries are only to be charged under adult supervision. Always disconnect your electric motor bike from the charger before cleaning with liquid.



NOTE: Chargers have built-in over charge protection to prevent battery from being over charged. Charger will get warm during using. This is normal for some charges and is no cause for concern. If your charge does not get warm during use, it does not mean that it is not working.

Be sure to properly align the groove on the charger input port with the corresponding socket on the vehicle and tighten threads; otherwise, no charging action will occur.



The charger port is located on the right battery cover.

ELECTRIC MINI MOTORCYCLE OWNER'S MANUAL

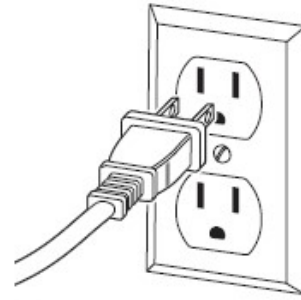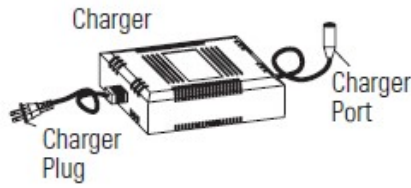

1 Turn **OFF** power switch before charging. Plug charger into the charger port on the electric motor bike.

2 Plug the charger plug into a wall outlet. If the lights on the charger do not light up, check the power to the outlet. If necessary, try a different outlet.

Warning: Failure to recharge the battery at least once a month may result in a battery that will no longer hold a charge.

SAFETY REMINDERS

PRE-RIDE CHECKLIST

Loose Parts

Check and secure all fasteners before every ride. Make sure steering stem clamp bolts are locked properly in place. There should not be any unusual rattles or sounds from loose parts or broken components. If you are not sure, ask an experienced mechanic to check.

Brake

Check the brake for proper function. When you squeeze the lever, the brake should provide positive braking action.

Frame, Fork and Handlebars

Check for cracks or broken connections. Although broken frames are rare, it is possible for an aggressive driver to bash into a curb or wall and wreck and bend or break a frame. Get in the habit of inspecting yours regularly.

Tire Inflation

Periodically inspect the tires for excess wear, and regularly check the tire pressure and re-inflate as necessary. If you get a flat tire, the inner tube can be patched or a new tube can be purchased from an authorized repair shop.

Safety Gear

Always wear proper protective equipment such as an approved safety helmet, elbow pads and kneepads. Always wear shoes (lace-up shoes with rubber soles), never drive barefooted or in sandals, and keep shoelaces tied and out of the way of the wheels, motor and drive system

ATTENTION

We recommend checking all tightened parts after the first time use. Special attention should be paid to the following parts:

- Footrest
- Shock absorber
- Engine bolts and nuts

ELECTRIC MINI MOTORCYCLE OWNER'S MANUAL

- Rear sprocket
- Front & rear wheel bolts

TECHNICAL SPECIFICATION SHEET


Motor type	500W 36V
Rated torque (500W)	1.9 N.m/ rpm
Battery	36V lead-acid battery or 36V lithium battery
Charger	100-240V/50-60 Hz
Transmission	Chain drive
Front suspension	Telescopic fork
Rear suspension	mono shock absorber
Tyre	front & rear 2.50-10 with 4.00 P.s.i operation pressure and 36 P.s.i Max. inflate
Brake system	front and rear disc brake with mechanical control
Rated loading capacity	75KG
Max. speed	24KM/hour
Range per charge	20km
Dimension (mm)	1280×550×850
Seat height (mm)	560

REPAIR AND MAINTENANCE

Turn power switch “OFF” before conducting any maintenance procedures.


Replacing The Fuse

1. Uncover the left battery cover to locate the fuse box attached to the batteries.

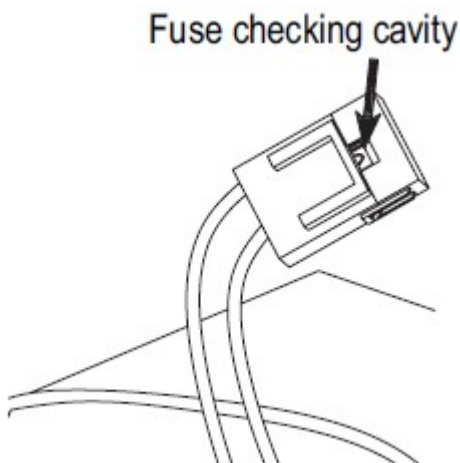

2. Check the fuse to see if it has burnt out. If the fuse is damaged, open the fuse cover.

ELECTRIC MINI MOTORCYCLE OWNER'S MANUAL

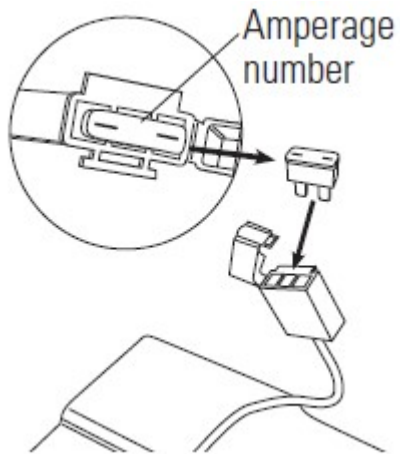

3. Remove any fuse that is damaged or burnt out and replace with a new one of equal amperage.

Note: Amperage is located on top of fuse.

WARNING:

To prevent shock, please follow above instructions accordingly and do not skip or combine any steps.

Adjusting chain

Check the drive chain periodically to ensure longer chain life.


Always keep it lubricated and tighten the chain as follows:

Step 1: Use the cross screwdriver to loose the 3pcs screws and remove the chain cover

Step 2: Loose the rear wheel axle nut with 17mm and 14mm open spanner, then loose the screw of caliper bracket, adjust the chain adjuster.




Step 3: The chain tension is in good condition while the gap is about 5mm between chain to lowest parts of swing arm. Lock all the nuts and screws, check the wheel alignment and then re-attach the chain cover.

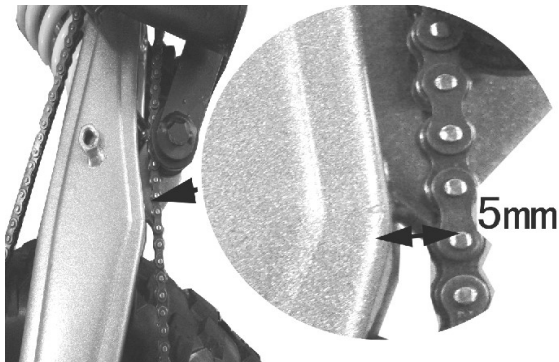

ELECTRIC MINI MOTORCYCLE OWNER'S MANUAL

Adjusting brake

Step 1:

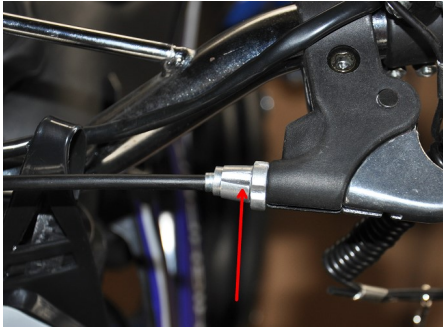

To adjust the brake tension, thread the brake lever adjuster in or out 1/4 or 1/2 turn until the required brake adjustments is attained.

Most of brake adjustments are complete at this step. If the brake still needs the further adjustment, proceed to step 2.

Step 2:



If the brake has too much slack, loosen the rear anchor bolt with a L-wrench and pull the brake wire tighter.

The distance of the brake wire between the end of the cable and the anchor bolt should be between 37mm and 44 mm.


Step 3:

If the brake rotor is dragging on the brake pads, use L-wrench to twist the caliper bolts in either direction until rotor is centered between pads.



Check

To check the wear of front and rear brake pads **A**, simply inspect the brakes calipers as shown in the below picture.

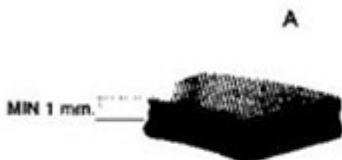

The thickness of the lining on the ends of the four pads should never be less than 1mm.

Should the lining be thinner, immediately replace the brake pads.

We recommend having the brake pads replaced by an authorized dealer.

Warning:

ELECTRIC MINI MOTORCYCLE OWNER'S MANUAL

The brake is capable of causing the electric bike to skid the tire throwing an unsuspecting rider. Practice in an open area free from obstacles until you are familiar with the brake function. Avoid skidding to stop as this can cause you lose control or damage the rear tire.

Testing the Brakes

To use the brake, squeeze the lever to increase the pressure on the brake. The brake lever is fitted with a cable adjuster to compensate for cable stretch and/or to fine-tune the lever movement to brake engagement. If brake is not engaging properly, follow instructions for adjusting the brakes.

Chain and sprocket

The chain will typically have a "loose spot" and "tight spot" corresponding with a particular sprocket rotational position. This is normal and common to all chain-driven products due to run-out to tolerance of the free wheel and sprocket. The chain should be adjusted to the ideal tension with chain in the tightest spot.

Proper chain alignment must be maintained. The wheel must not be skewed, if the chain is noisy or rough running, check the lubrication, tension and alignment of sprockets, in that order.

Warning:

To avoid a pinch or injury, keep fingers away from moving sprockets and chain.

Battery disposal



BATTERIES MUST BE RECYCLED.,

Disposal: Your product uses sealed lead-acid batteries or lithium battery which must be recycled or disposed of in an environmentally sound manner. Do not dispose in a fire. The battery may explode or leak. Do not dispose of the battery in your regular household trash.

Charger

The charger supplied with the bike should be regularly examined for damage to the cord, plug, enclosure and other parts, and, in the event of such damage, the bike must not be charged until it has been repaired or replaced.

USE ONLY WITH THE RECOMMENDED CHARGER

ELECTRIC MINI MOTORCYCLE OWNER'S MANUAL

TROUBLESHOOTING GUIDE

Problem	Possible cause	Solution
Vehicle does not run.	Undercharged battery. (The green light of battery indicator is off.)	Charge the battery. A new battery should have been charged for 4-6 hours before using the vehicle.
		Check all connectors. Make sure the charger connector is tightly plugged into the charging port, and that the charger is plugged into the wall.
		Make sure electric power to wall outlet is on.
	Charger is not working.	You may check to see if your charger is working by using a volt meter or asking the authorized service center to test your charger for you.
Vehicle was running but suddenly stopped.	Loose wires or connectors.	Check all wires and connectors to make sure they are tight.
	Burned-out fuse.	The fuse will burn out and automatically shut off the power if the motor is overloaded.
		An excessive overload could cause the motor to overheat. Refer to replacing the fuse instructions of this manual. Correct the conditions that caused the fuse to burn out and avoid repeatedly burning out fuse.
Motor or electrical switch damage.	Contact the authorized service center for diagnosis and repair.	
Short run time less than 15 minutes per charge	Undercharged battery	Charge the battery. A new battery should have been charged for 4-6 hours before using the vehicle.
		Check all wires and connectors. Make sure the battery connector is tightly plugged into the charger connector, and that the charger is plugged into the wall.
		Make sure power flow to the wall outlet is on.
	Battery is old and will not accept full charge.	Even with proper care, a rechargeable battery does not last forever. Average battery life is 1 to 2 years depending on vehicle use and conditions. Replace only with a replacement battery.
	Brakes are not adjusted properly	Adjust the brake according to the instruction.

ELECTRIC MINI MOTORCYCLE OWNER'S MANUAL

Vehicle runs Sluggishly.	Driving conditions are too stressful.	Use only on solid, flat clean and dry Surfaces such as pavement or level ground.
	Tires are not properly Inflated.	The tires are inflated when shipped, but They invariably will lose some pressure Between the point of manufacturing and your purchase. Refer to tire instructions to properly inflate tires.
	Vehicle is overloaded.	Make sure you do not overload the vehicle by allowing more than one rider at one time, exceeding the maximum weight limit, going up too steep a hill or towing objects behind the vehicle. If the vehicle is overheated, the temperature circuit protector will slow motor down and if the condition continues, will shut off power to the motor. Correct the driving conditions that caused the overheating, wait 5-10 minutes and then resume riding. Avoid repeatedly overheating the unit.
Sometimes the vehicle doesn't run, but other times it does.	Loose wires or connectors	Check all wires around the motors and all connectors to make sure they are tight.
	Motor or electrical Switch damage.	Contact the authorized service center for diagnosis and repair.
Charger gets warm During use	Normal response to Charger use	No action required. This is normal for some Chargers and is no cause for concern. If your charger dose not get warm during use, it does not mean that it is not working properly.
Vehicle does not Stop when applying the brake.	Brakes are not adjusted properly	Refer to brake instructions to properly adjust Brakes.
Vehicle makes loud noises or grinding sounds	Chain is too dry	Apply a lubricant to the chain.

ELECTRIC MINI MOTORCYCLE OWNER'S MANUAL

CIRCUIT DIAGRAM

